

Note: This guide covers the most basic features of the Digital TV system. A complete User Guide may be found in the Service & Support section of the WCTA website.

Visit www.wctatel.net and click on Service & Support.

Settings

To watch TV your TV must be on the following channel or input:

Location: _____

TV Brand: _____

Channel: _____

Input: _____

If your Digital TV service is not working please make sure the TV is on the correct channel or input. The easiest way to change the channel or input is to find the original TV remote.

Turning the System On and Off

Note: For best performance leave the Set Top Box on at all times. These instructions assume that is the case.



Turning the System On:

- Turn your TV on by pressing the **TV** button, and then the **POWER** button.
Note: Your TV must be tuned to the correct channel or input to receive the signal from the Set Top Box. See the Settings section above for details.
- Next, press the **STB** button. You are now ready to watch TV.

Turning the System Off:

- Turn your TV off by pressing the **TV** button followed by the **POWER** button.

Determining if the Set Top Box is On:

- A light will be illuminated on the front of the Set Top Box if it is on (**Red** on standard Set Top Boxes and **Green** on DVR boxes.) If the light is not illuminated you will need to turn it on using the following step.
- To turn your Set Top Box on press the **STB** button followed by the **POWER** button. The power light will illuminate on the front of the Set Top Box when it is powered on.

Using the On Screen Guide

WCTA's Digital TV Service has an easy to use On Screen Guide that allows you to see what is playing now or in the future.

Using the On Screen Guide:

To access the On Screen Guide, press the **Guide** button on the Remote Control.

The bottom two-thirds of the screen contains the channel grid. The upper portion of the screen will display information about the highlighted channel and program.



Navigating the Guide

- Use the **Up** and **Down** arrows to view information for different channels. You may also use the **PG +** and **-** keys to move the guide up or down 1 screen at a time.
- Use the **Left** and **Right** arrows to view programming information for different times.
- Press the **Info** button to get more detailed information about the selected program.
- To watch the selected program press the **OK** button. If the selected program is in the future an Alert will be created.
- To move ahead 24 hours press the **+ Day** button.
- To exit the Guide press the **Exit** button.



Normal Guide Screen



Guide Screen by Channel

Control the Remote

TV, AUD, DVD, VCR, STB
Use one remote to control multiple devices.

Setup
Use for programming sequences of devices controlled by the remote.

REW, PLAY, FFWD, STOP, PAUSE
In STB mode, these control the DVR functions. In other modes, these can control a DVD Player or other device.

Menu
Displays applications including the configuration menu.

Guide
Opens the Interactive Program Guide.

Day +/-
Jump ahead or back one day in the Interactive Program Guide.

Red, Green, Yellow, Blue
Access additional features on your settop box.

Vol +/-
Raise or lower the volume.

Mute
Turn the sound off or on.

FAV
View your favorite channels.

Input
In TV control mode, would change the input of the device you are controlling.

Power
Turn on/off a selected device.

Live
Return to watching live TV.

List
Display a list of recorded shows on your DVR settop box.

Info
Display the current channel and program information. Press again for more detail.

Arrow Keys/OK
Navigate and select onscreen choices.

Exit
Exit the current screen.

Page +/-
Page up or down in menu screens & Interactive Program Guide.

Channel +/-
Changes to the next higher or lower channel.

On Demand
Access video on demand services.

Last
Recall the last channel you were watching.

Number Keys (0-9)
Directly select a channel.



Version 4.0
7/9/13

WCTA Digital Entertainment Services



1-800-592-6105

www.wctatel.net

704 E Main - Lake Mills, Iowa

Important Instructions

Turning the System On:

Press  - then  - then 

Turning the System Off:

Press  - then 